
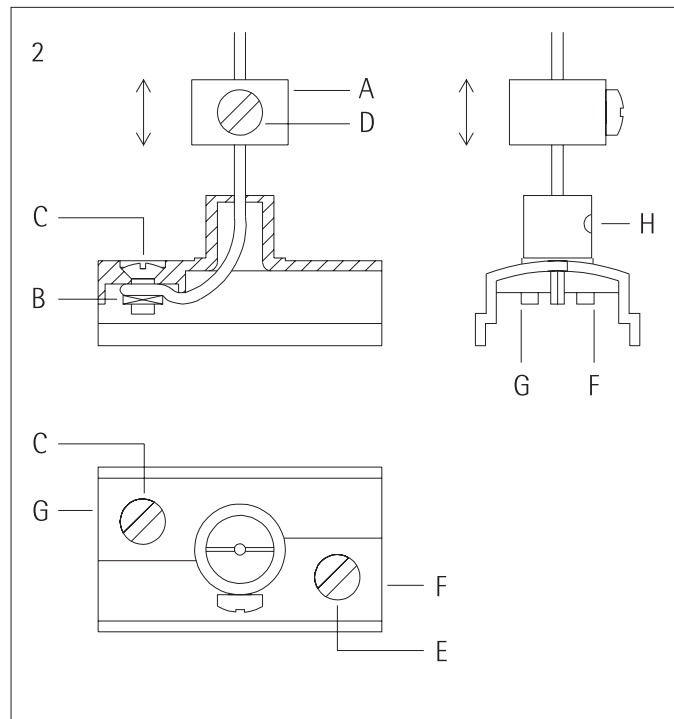


Mounting bush

Mounting instructions

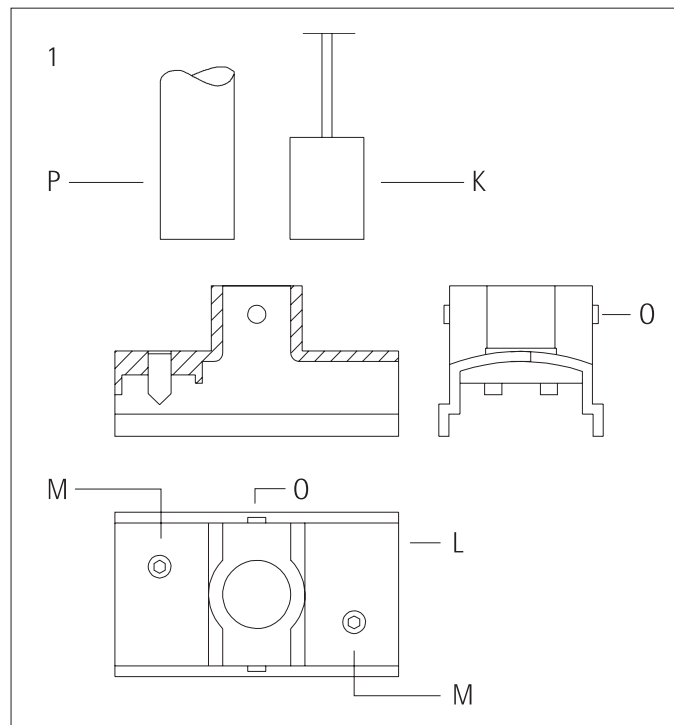

English

 Read the instructions carefully before installation and commissioning!

 Leave the instructions for users/customers for future reference!

General safety information

 **Warning!**
Risk of electric shock!

Prior to maintenance, cleaning and installation work, disconnect mains cables and existing DALI control lines and check the power is switched-off.

Attention!

When installing, always observe the national installation and accident prevention regulations.

Intended use

For suspending ERCO track.

For suspension with pendant tubes or wire ropes (fig. 1)

1. Undo the grub screw "M" (2.5mm Allen-key).
2. Insert the mounting piece "L" into the upper-side of the ERCO track and tighten the grub screw "M".
3. Insert the pendant tube "P" or wire rope nipple "K" into the mounting bush "L" and tighten the grub screws "O" (2.5mm Allen-key) to 1.8Nm.

For subsequent mounting (fig. 2)

For suspension with wire rope of $\varnothing$ 1.5-2.0mm.

1. Release screw "D" and remove casing "A".
 2. The mounting bush consists of two halves "F" and "G". Remove screws "C" and "E" and slide tube "A" over the wire rope.
 3. Insert wire rope with a loop between nut "B" and half "G" and tighten screw "C".
 4. Install both halves of the mounting bush within the ERCO track and push tube "A" over the shaft.
 5. Tighten screw "D" into locking hole "H" in the shaft.
 6. Secure the assembled mounting bush using screw "E" into the track.
 7. The length of the wire rope can be adjusted, or the height adjustment made, by loosening the screw "C". While doing this the system must be supported from beneath.
- Note: The free end of the wire must be visible (min. length of 4cm).